



YG-811 Walkie Talkies Frequently-asked Questions

Question 1



Do I need to charge it before using it when I receive the walkie-talkie?

Point of Use

It's best to fully charge before use, the effect will be better, about 4 hours to fully charge

Question 2



Why is the walkie-talkie sometimes unable to turn on?

Point of Use

Generally, the battery is under low voltage protection, the walkie-talkie be charged for 3-5 minutes to activate the battery, and then it can be used

Question 3



What should I do if the walkie-talkie is locked due to wrong operation?

Point of Use

Press the " MENU " button 4-5s can lock and unlock walkie talkies

Question 4



How to increase the volume of the walkie-talkie?

Point of Use

The volume of walkie talkies has 1-16 levels. The "+" and "-" on the button adjust the volume. The larger the number, the louder the volume.

if sets the volume to 10-12 levels, advise to use a distance of at least 1 meter;

If the setting volume is 16, advise to use a distance of more than 3 meters.

Note: sometimes walkie-talkies is too close, the signal reception will be interfered

Question 5



Are there any points to attention to when setting the main channel and sub-channel of the walkie-talkie?

Point of Use

The main channel and sub-channel of the walkie-talkie and the walkie-talkie must be set the same before they can communicate. As shown in the pic, 22 is the main channel and 02 is the sub-channel

